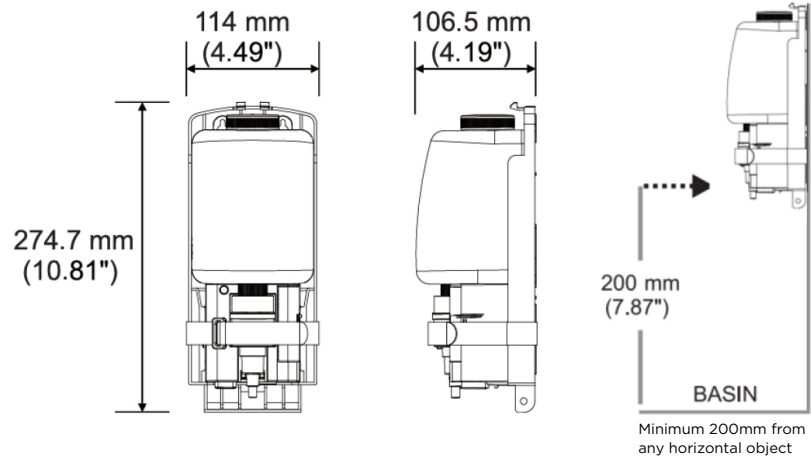


AUTOMATIC BEHIND THE MIRROR FOAM SOAP DISPENSER

B-2018.91

(For Sale in India Only)

**MATERIALS:**

Housing — Plastic back plate incorporates mounting screw holes and mounting tape. Refillable, plastic container. Capacity: 1200 ml (40.5-fl oz). Equipped with a black strap to hold the valve.

Valve — No-touch, sensor-activated valve suitable for foam soap. Valve life is 200k cycles.

OPERATION:

To fill the dispenser, remove the black strap and remove container from the base, open the lid and fill with suitable foam soap solution. After filling soap container, DO NOT TIGHTEN lid. Air flow is necessary inside the container for dispensing. Use foam soap only. To activate the dispenser, place hand under spout for approximately one second. Sensing range comes at factory setting of 120 ± 20 mm. The sensing range set by the factory is recommended for optimal performance. The unit can be powered with an adapter (included) or requires four (4) Alkaline "AA" Cell Batteries, 1.5V (not included). Blue indicator light signals "IN USE". Flashing blue light signals "LOW BATTERY." CE Certified.

INSTALLATION:

Install dispenser at least 200 mm (8") from any projection or horizontal surface which may interfere with the operation of the automatic sensor (see Mounting Location Notes below for exception to the 8" minimum). Mount the dispenser to the wall by using the enclosed screws and wall plugs. The prepared mounting tape may also be used. Make sure the wall surface is cleaned and in good condition to ensure proper mating of the dispenser to the wall. The unit can be powered with an adapter (included) or install four (4) Alkaline "AA" Cell Batteries (not included), 1.5V and replace battery cover. After filling soap container, DO NOT TIGHTEN lid. Air flow is necessary inside the container for dispensing.

continued . . .

MOUNTING LOCATION NOTES:

1. Do not tighten the screws to secure mounting back plate tightly on the wall. Mount the back plate on the screws in such a way that it can be taken out for refilling/servicing as needed.
2. The dispenser can be mounted with 150mm (6") minimum clearance below sensor when a non-reflective countertop surface is used.
3. There should be a minimum 20mm gap between the dispenser and mirror frame.

SPECIFICATION:

Automatic Behind the mirror foam soap dispenser shall be equipped with corrosion-resistant valve and dispense only foam soap. Valve shall be sensor-activated and not require contact with the dispenser to function. Container shall have a capacity of 1200 ml (40.5-fl oz). Unit shall have CE Certification.

Behind The Mirror Sensor-Operated Foam Soap Dispenser shall be Model B-2018.91 of Bobrick Washroom Equipment India Private Limited, India.