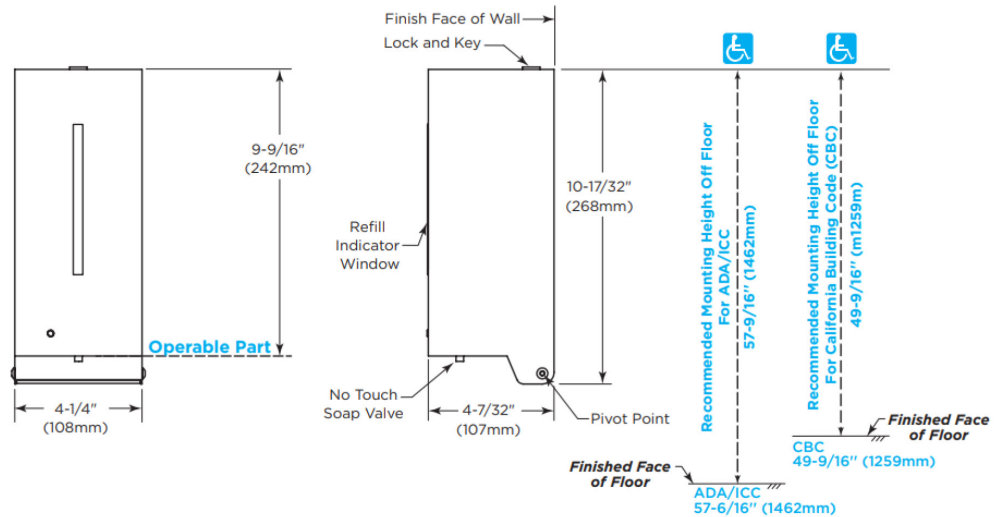


# AUTOMATIC WALL - MOUNTED LIQUID SOAP DISPENSER

**B-2012.91**

(For sale in India Only)

**Installation Guidance***\*Operable Part: Automatic Sensor***Maximum mounting height of Operable Part:**

ADA/ICC (Reach Depth 20" Maximum Over Countertop): 48" above finished floor (AFF)

ADA/ICC (Reach Depth 20"-25" Maximum Over Countertop): 44" finished floor (AFF)

CBC: 40" above finished floor (AFF)

*\*For more information regarding operable parts, please refer to Bobrick Planning Guide for Accessible Restrooms, page 9.***MATERIALS:**

**Housing** — Welded 18-8, Type-304, 18-gauge (1.0 mm) stainless steel with satin finish or matte black as specified. Plastic back plate incorporates mounting screw holes and mounting tape. Equipped with concealed mounting, clear acrylic refill-indicator window and key lock. Refillable, plastic container. Capacity: 800 ml (27-fl oz).

**Valve** — No-touch, sensor-activated valve suitable only for liquid soap.

**OPERATION:**

To fill the dispenser, remove the lid and fill with liquid hand soap. Dispenses liquid hand soaps of viscosities ranging from 1-3,000 cps. After filling soap container, DO NOT TIGHTEN lid. Air flow is necessary inside the container for dispensing. To activate the dispenser, place hand under spout for approximately one second. Sensing range comes at factory setting of 60mm (2-1/2"). The sensing range set by the factory is recommended for optimal performance. Window indicates when refill is required. The locked, hinged housing opens for re-filling only with special key provided. The unit can be powered with an adapter (included) or requires four (4) Alkaline "AA" Cell Batteries, 1.5V (not included). Blue indicator light signals "IN USE". Flashing blue light signals "LOW BATTERY." CE Certified.

continued . . .

**INSTALLATION:**

Install dispenser at least 200 mm (8") from any projection or horizontal surface which may interfere with the operation of the automatic sensor (see Mounting Location Notes below for exception to the 8" minimum). Mount the dispenser to the wall by using the enclosed screws and wall plugs. The prepared mounting tape may also be used. Make sure the wall surface is cleaned and in good condition to ensure proper mating of the dispenser to the wall. The unit can be powered with an adapter (included) or requires four (4) Alkaline "AA" Cell Batteries, 1.5V (not included) and replace battery cover. After filling soap container, DO NOT TIGHTEN lid. Air flow is necessary inside the container for dispensing. Housing must be closed for dispenser to function.

**MOUNTING LOCATION NOTES:**

1. Height of dispenser limits mounting dispenser alongside, not under, mirrors mounted above individual lavatories and countertops.
2. The dispenser should be mounted with 200mm (8") clearance between sensor and shiny, bright, matte metal reflective lavatory, countertop surface below to avoid sensor malfunction.
3. The dispenser can be mounted with 150mm (6") minimum clearance below sensor when a non-reflective countertop surface is used..

**SPECIFICATION:**

Automatic wall-mounted liquid soap dispenser shall be Type-304 stainless steel with satin finish or matte black as specified. Corrosion-resistant valve shall dispense a variety of liquid soaps, iodine-based soaps, and alcohol-based liquid or gel hand sanitizers. Valve shall be sensor-activated and not require contact with the dispenser to function. Lockable housing shall be equipped with a clear acrylic refill-indicator window and be hinged for refilling and maintenance. Container shall have a capacity of 800 ml (27-fl oz). Unit shall have CE Certification.

**Surface-Mounted Sensor-Operated Soap Dispenser shall be Model B-2012.91 of Bobrick Washroom Equipment India Private Limited, India.**